

# INSTALLATION MANUAL

**HUBER+SUHNER AG**  
Fiber Optics  
**MASTERLINE Ultimate Small Cell**

October 18, 2016  
Page 1 of 2

## MASTERLINE Ultimate Small Cell


### Table of contents

- POLE INSTALLATION ..... 1
- WALL INSTALLATION ..... 2

### POLE INSTALLATION


#### Step 1

Feed hose clamps through dedicated eyelet on the base of the connector head.

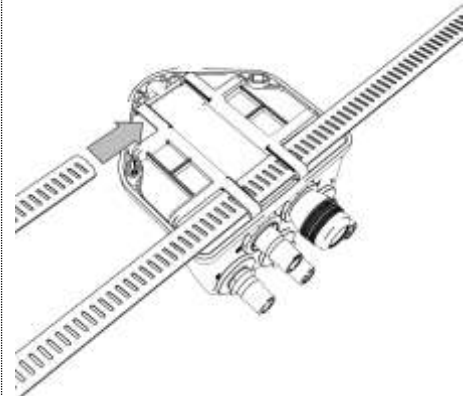

#### Step 2

Fix housing to mast.  
Be careful not to damage it by over-tightening the clamps (max 5Nm).

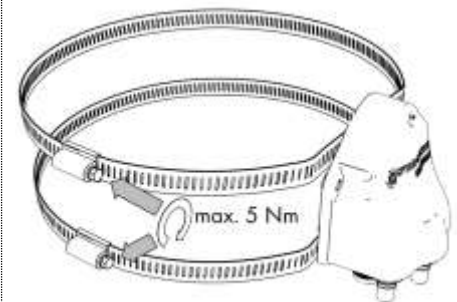

**WALL INSTALLATION****Step 1**

Use M3 steel screws or wood panhead screws 3.5x20 and suitable washer to mount the connector head on a wall. Hole spacing is 75mm.

Be careful not to damage it by over-tightening the screws (max 1Nm).

