

INSTALLATION MANUAL

HUBER+SUHNER AG
Fiber Optics
Fiber Management Systems
DOC-0000408995 Rev C
Date: 09/09/2016

Page 1 of 2

Hinge adaption for different TrayUnits

Table of contents


- HINGE ADAPTION FOR DIFFERENT TRAY UNITS..... 1

HINGE ADAPTION FOR DIFFERENT TRAY UNITS

New Fiber Tray:

The new „Hinge patchcord arm support“ is snapped to the Patchcord arm. It stays horizontal even if the Fiber Tray is hinged down.


1. The Fiber Tray cassette snaps into the TrayUnit
2. The Patchcord arm is supported during the complete slide length

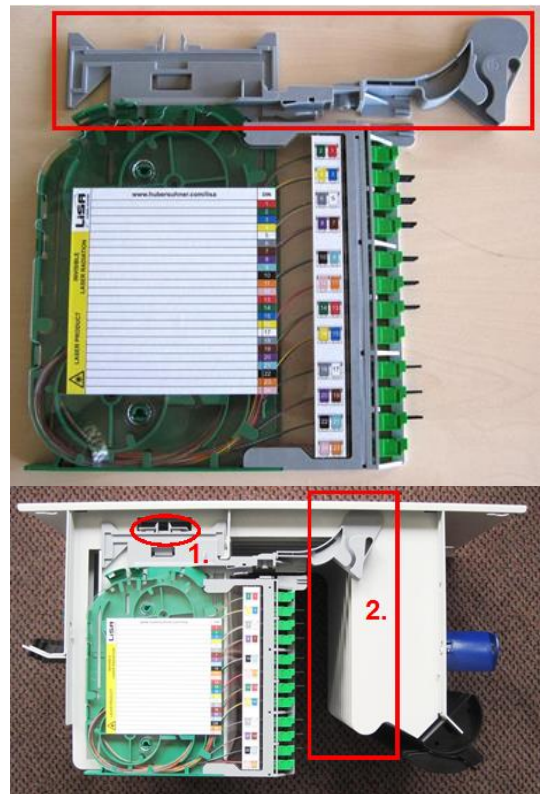


Step 1

Dismounting Hinge:

1. Place the complete FiberTray as shown on desk
2. Pull up the left side of the hinge 90° by shifting it up
3. Push the complete shifted hinge set in this position to the right side until

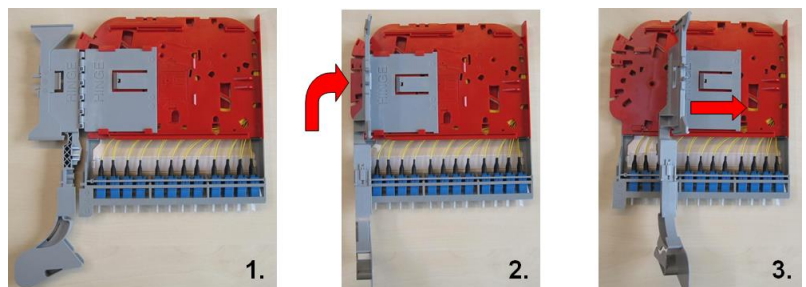
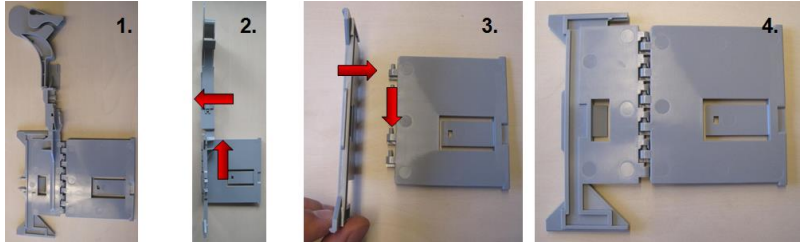
| | | |
|---------------|---|--|
| | it is no more fixed to the cassette | |
| Step 2 | Retrofitting of the new hinge version to the old one: <ol style="list-style-type: none">1. Place the assembled hinge as shown on desk2. Pull up the left side of the hinge 90° by shifting it up and then to the left so that the parts are no more connected3. Attach the old part with a 90° angle to the other part. Pull it right and down so that both parts are together again.4. The complete hinge can be mounted to the Fiber Tray again |  |